

LOCKKINK × sevanda


# Nautilus Estim Chastity Cage

## Instruction Manual

Read this instruction manual carefully before using the product, and please keep it properly



## ● Remote control

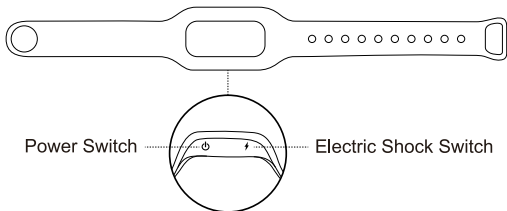

## ● Instructions



1. Press and hold the host switch for 2 seconds, turn on main power switch, and enter the standby mode.
2. Click again to enter the electric shock mode 1, and tap to switch the frequencies, a total of 9 frequencies.
3. Press and hold for 2 seconds to power off.

- The working indicator light flashes to indicate when there is an electric shock.
- The light will be always on when in standby mode.
- When the cage is charging, the main unit cannot work, and the working indicator light flashes slowly.
- and the light will be always on when fully charged.


## ● Remote Control Operating Instructions

1. When the cage is turned on, it will be in stand-by mode automatically, lightly press the electric shock switch on the side to switch the electric shock frequencies, a total of 9 frequencies.
2. Press and hold the power switch for 2 seconds to turn off the cage.  
(If you need to operate remotely again, please manually turn on the power switch of the cage)


## ● Product Diagram

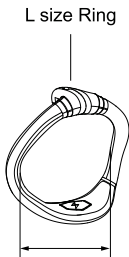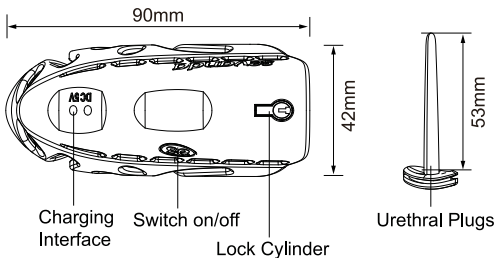

$\Phi$ :55mm  
C:172mm

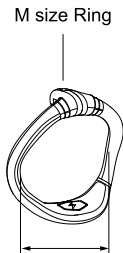

$\Phi$ :50mm  
C:157mm

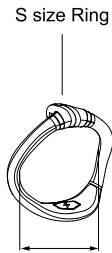

$\Phi$ :45mm  
C:147mm

## ● Product Parameters

Product Name	Nautilus Estim Chastity Cage
Product Size	100x83x68mm
Ring Size	L: Φ55MM , M: Φ50MM , S: Φ45MM
Product Weight	Remote:25g, Cage: 45g
Product Material	ABS+PC+SILICONE
Product Control	Wireless Remote Control
Certification Standard	ROSH certification
Battery Life	7-8 hours
Product Features	9 electric shock frequencies
Waterproof Grade	IPX6
Battery Specification	120mAh polymer lithium battery

- 1.Full Charged in about 70 minutes. Depending on the battery's state, charging duration fluctuates between 60 to 90 minutes.
- 2.Charging voltage is DC 5V and the maximum voltage should not exceed DC5.4V.
- 3.Charging is prohibited in moisture circumstances, such as showering, soaking in urine ect. Please let dry in a ventilated environment before charging.
- 4.The remote control works up to 3-8 meters away, which varies depending on the usage environment and signal blocking factors.
- 5.The average value of the instantaneous voltage of electric shock operating voltage in gears 1-3 is 36-40V, with a tolerance of plus or minus 5V. The working band was 2-segment instant peak output. The average of the instantaneous voltage of electric shock in gears 4-6 is 60-72V, with a tolerance of plus or minus 8V. The working band was 4-segment instant peak output. The average of the instantaneous voltage of electric shock in gears 7-9 is 90-104V, with a tolerance of plus or minus 10V. The working band was 8-segment instant peak output.
- 6.The device works not less than 48 hours after full charged.

# Warning

1. It is recommended to clean the product frequently, at least more than once after 2 weeks.
2. Do not immerse in water or other liquids. And it should not be worn when swimming or diving.
3. Avoid sharp objects coming into contact with this product.
4. This product is not intended for medical purposes.
5. It is recommended NOT to wear continuously for more than 14 days.
6. If congestion, swelling, or obvious pain is unbearable, it should be immediately stopped. Do not put it in high temperature and open fire. To ensure health, please use it privately and do not wear it interchangeably. After going to the toilet, it should be cleaned up in time and thoroughly. It is normal to feel a sense of restraint during erection.
7. Please avoid strong impact on the product.
8. Mild heating during use is normal.
9. Do not expose the product to strong direct sunlight for too long.
10. Due to the unique product definition, please use this product with caution. Our company is not responsible for any physiological problems caused.